


DuroZone®

DIAGRAM FOR WIRING THE SMZ PANEL TO A THERMOSTAT THAT DOES NOT HAVE SEPARATE 'B' AND 'O' TERMINALS


(These instructions exclude the SMZ-AC panel)

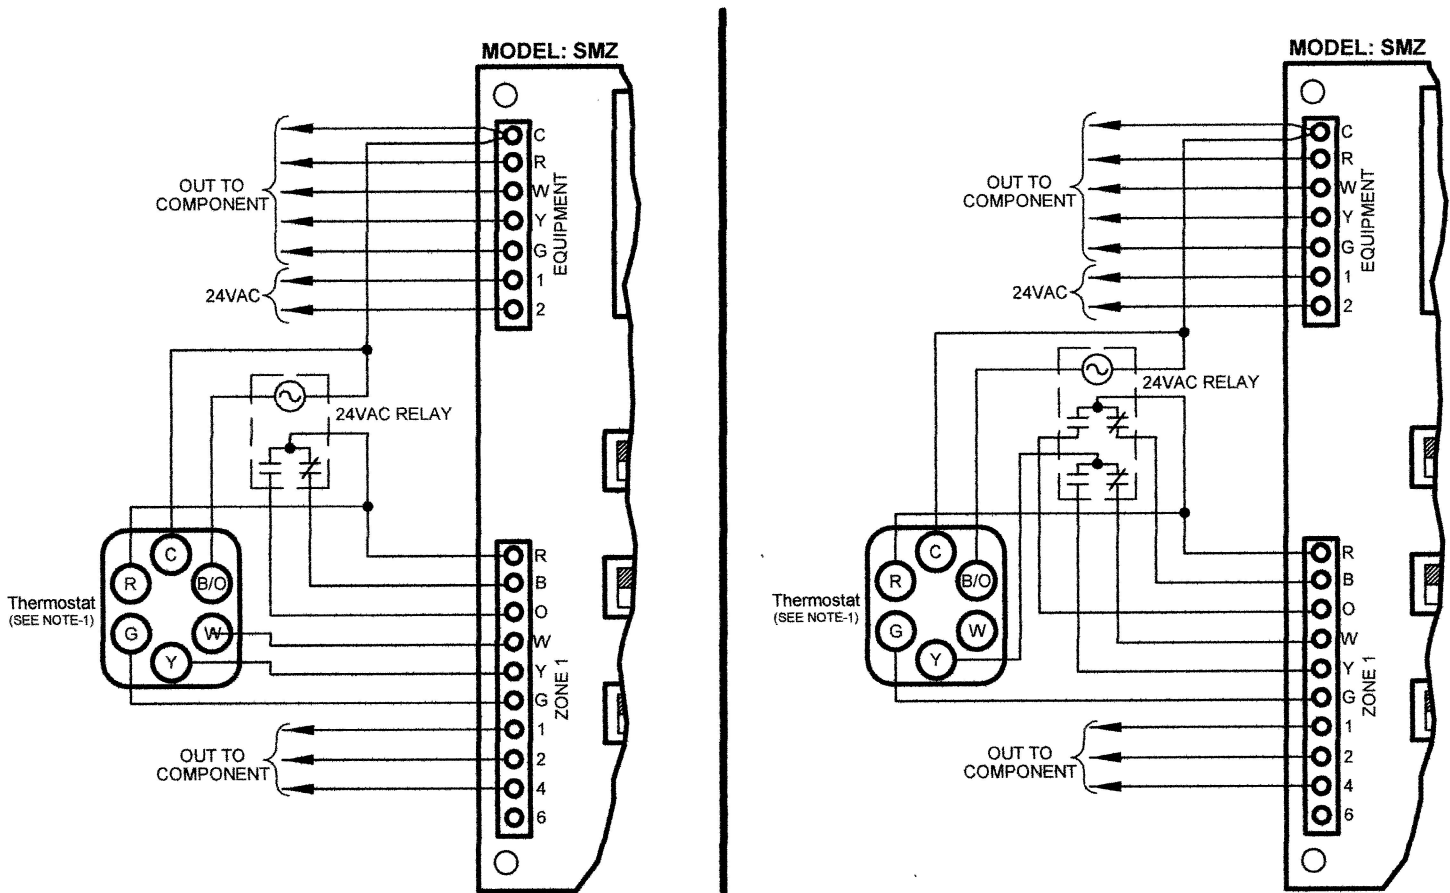

Some Thermostats have to be programmed to Heat Pump for the B/O Terminal to operate (Nest). In this case, a Relay with two sets N/O and N/C contacts must be used.

NOTE-1: Select '0' for the reversing valve

WIRING FOR ZONE 2 AND UP

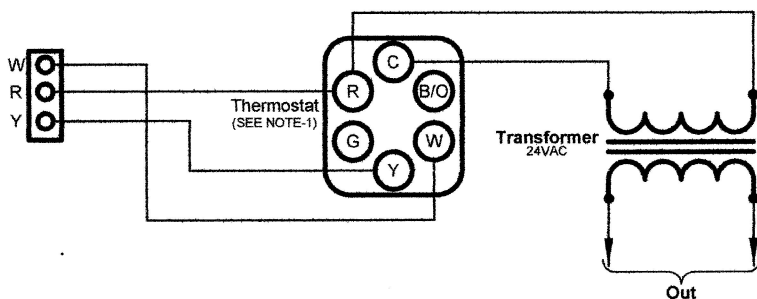

For this application, you must have an independant 24vac power supply

NOTE-1: Select '0' for the reversing valve

(This drawing is a guide. Reading ALL instructions is recommended.)

Please contact our Technical Service Department with any questions at

(Ph: 631-249-9000 / Fax: 631-249-8346)