



DuroZone®

INSTALLATION INSTRUCTIONS

MMB SERIES MULTI-BLADE DAMPER SPRING RETURN MID-TORQUE MOTOR

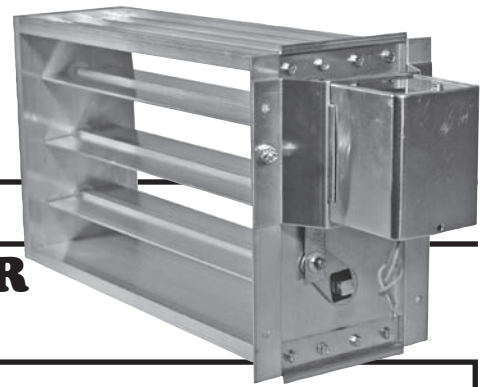

INSTALLATION IN DUCT

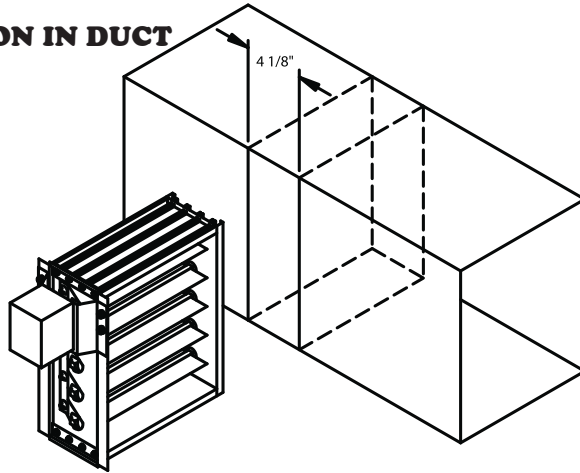


1. Cut 4 1/8" wide slot into side of sheet metal duct.
2. Slide damper into duct work.
3. Secure by screwing the damper into the ductwork.
(Screws Provided)

TYPICAL WIRING

To Control Panel Part# 35226 (SMZ2SW)
35227 (SMZ3SW) /35229 (SMZAC)
35235(JTZHP) /35236 (ED3) /35237 (ED4)

Wiring diagram for a spring return damper that without power is normally open (spring open).

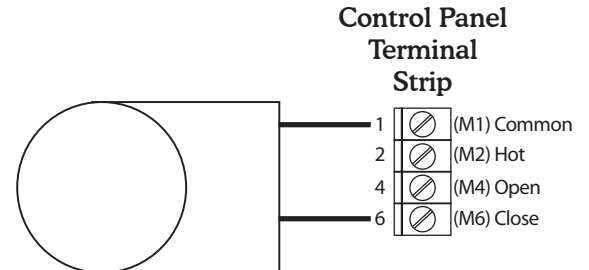

NOTE: On SMZ Panels it is recommended to leave the damper switches on the control panel in the open position.

MOTOR LEAD IDENTIFICATION

Yellow and Orange leads: 24 volt input AC Only


- IMPORTANT -

This motor is designed for use with 24 Volt VAC power source.

- WIRE ACCORDING TO LOCAL CODE -

Spring Open Damper Motor Operation

Energizing the Yellow and Orange leads with 24 volts will close the damper.
Removing power from the Yellow and Orange leads will cause the damper to return to a fully open position.

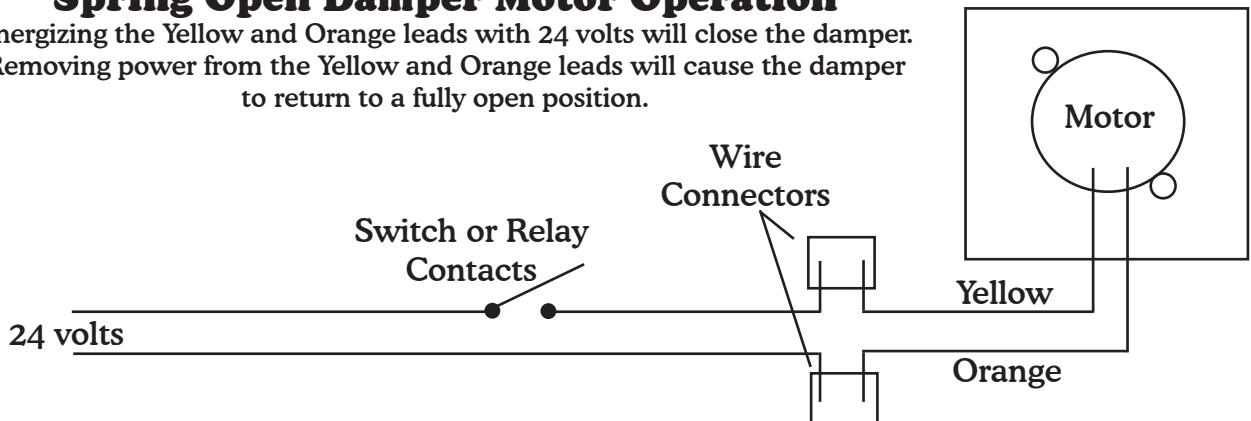

Duro Dyne East • Bay Shore, NY 11706 • Phone: 631-249-9000 • Fax: 631-249-8346
Duro Dyne Midwest • Fairfield, OH 45011 • Phone: 513-870-6000 • Fax: 513-870-6005
Duro Dyne West • Santa Fe Springs, CA 90670 • Phone: 562-926-1774 • Fax: 562-926-5778
Duro Dyne Canada • Lachine • Quebec • Canada • Phone: 514-422-9760 • Fax: 514-636-0328


©2007 Duro Dyne Corporation
Printed in USA 06/2007
B1035403

ALL DuroZone DAMPERS FEATURE:
• 3 year limited warranty • Controlled bypass •
Maintenance free operation • 100% factory testing •
Screwless terminals • Custom dampers and special controls are available on request.


DuroZone[®]

GASKET INSTALLATION INSTRUCTIONS

MMB SERIES MULTI-BLADE DAMPER SPRING RETURN MID-TORQUE MOTOR

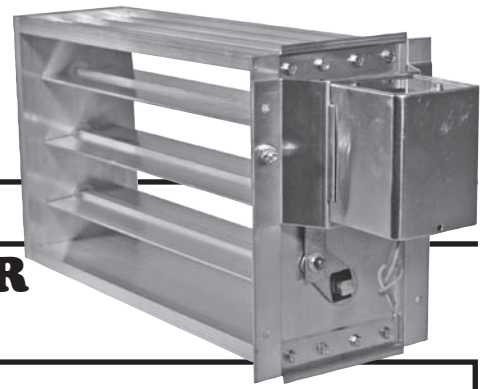

Direction of Air Flow

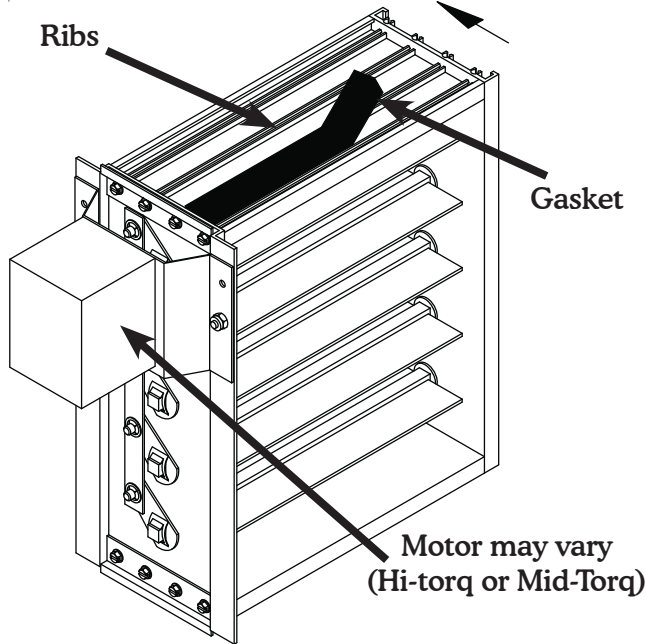

Note the direction of the air-flow when securing the gasket to the frame.


Gasket must be placed at the leading face of the frame between the two end ribs as shown.

Direction of Air Flow

Note the direction of the air-flow when securing the gasket to the frame.

Gasket must be placed at the leading face of the frame between the two end ribs as shown.

Motor may vary
(Hi-torq or Mid-Torq)

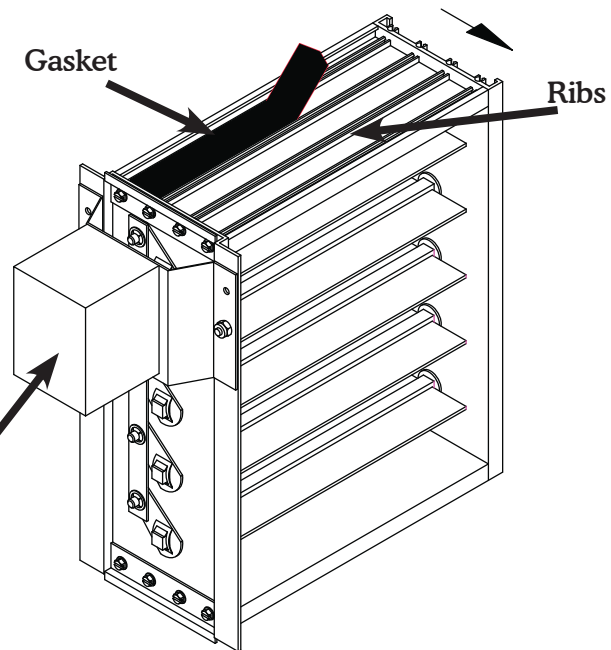

Duro Dyne East • Bay Shore, NY 11706 • Phone: 631-249-9000 • Fax: 631-249-8346
Duro Dyne Midwest • Fairfield, OH 45011 • Phone: 513-870-6000 • Fax: 513-870-6005
Duro Dyne West • Santa Fe Springs, CA 90670 • Phone: 562-926-1774 • Fax: 562-926-5778
Duro Dyne Canada • Lachine • Quebec • Canada • Phone: 514-422-9760 • Fax: 514-636-0328

©2007 Duro Dyne Corporation
Printed in USA 06/2007
BI035403

ALL DuroZone DAMPERS FEATURE:
• 3 year limited warranty • Controlled bypass •
Maintenance free operation • 100% factory testing •
Screwless terminals • Custom dampers and special controls are available on request.